

# PHILIPS

# STV



## PHILIPS



# Installation


Follow the instructions very closely and step by step.

- This circle in front of a sentence indicates that you have to do something.
- ▷ This arrow in front of a sentence indicates the result of what you have done.
- This bar in front of a sentence indicates help information.*

Place the TV on a solid base.

Leave at least 3 cm around each side of the TV for ventilation.

The TV can only operate at a mains voltage of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

- Connect the TV tightly to the mains supply socket.
- Connect the aerial (indoor or outdoor) plug to the  socket on the back of the TV.

Make sure that the connection facilities to any TV installed in your house are in good condition. Only use good quality aerial connectors and cables. The aerial plugs should be tightly connected.

Small screen TV's are equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:

- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

## Remote control

 
- Remove the battery cover on the back of the remote control.
- Insert the batteries, as indicated on the remote control.
- Replace the battery cover.

## Control panel

 
The control buttons needed for adjusting the TV are located behind the control panel cover on the front of the TV.

To open, simply press on the middle of the panel cover.

## Switching TV on

- Press  on the front of the TV.
- ▷ The TV is switched on.
- Is the TV still switched off? Then the TV is on Stand-by.
- Press **P** — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV.



## Stand-by

- By pressing  on the remote control you can temporarily switch the TV off.
- Press **P** — or + or a digit button on the remote control, or — or + on the TV, to switch on the TV again.

## Automatic switch off

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

Switch off your TV overnight instead of leaving it on Stand-by. You save energy and the picture tube is demagnetised which favours good picture quality.

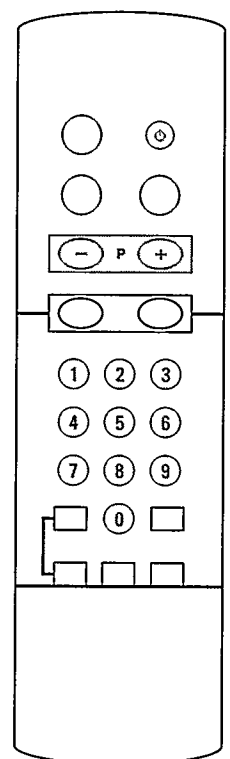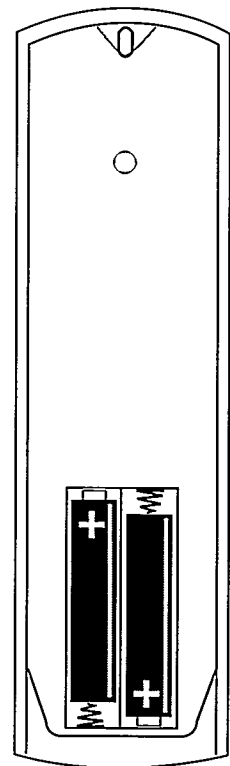

# 2 Storing TV channels

59 TV channels can be stored on program numbers. Write down the TV channels and the assigned program numbers while storing.

Follow carefully steps **a, b, c, d, e**.

- a.**
- Press simultaneously the two  $\diamond \diamond$  buttons.
  - ▷ The current program number and the TV-system are displayed on the screen.

- b.**
- You can select a different TV-system for each separate program number.
  - You can select among the following TV-systems:

Region	TV-system	Used in
EUROPE	PAL BG - SECAM BG	West European countries except France, except United Kingdom and Ireland.
FRANCE	SECAM L L'	France.
UK	PAL I	United Kingdom and Ireland.

- Press  $\Upsilon$  one or more times to select the required TV-system.

- c.**
- Press  $\square$  to start the search.
  - ▷ The TV automatically searches until a TV channel is found.
  - If you want to continue searching for a specific TV channel then press  $\square$  again.



- d.**
- Press **P** — or **+** or one or two digit buttons to select the program number (1 to 59) where you want to store the TV channel.
  - ▷ The selected program number is displayed on the screen.

The sound-volume of some TV channels can be somewhat higher or lower than normal. If necessary, you can adjust the sound-volume for this specific TV channel to normal sound-volume, by pressing  $\triangle$  — or  $+$ .

- e.**
- Press simultaneously the two  $\diamond \diamond$  buttons to store this selection.

**REPEAT** Repeat steps **a, b, c, d, e**, until all the TV channels you require have been stored on program numbers.

Storing TV channels can be stopped by pressing simultaneously the two  $\diamond \diamond$  buttons.

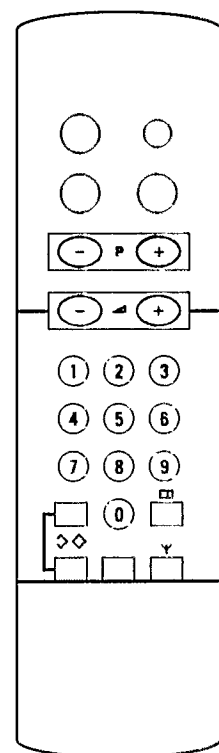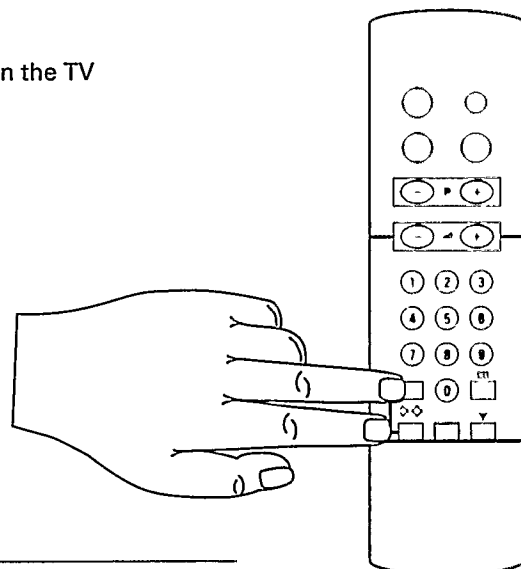

## Auto Programming

The Auto Programming function can be used to find and store all available channels quickly. Channels are stored on program numbers in the same sequence as they are found.



After Auto Programming is started, the TV starts searching for a channel. If a channel is found, it will be automatically stored on program number 1. Searching will start again automatically. If another channel is found, it will be stored on program 2, etc.

 

Your TV can receive different TV systems. With Auto Programming the TV searches automatically through all TV systems and stores all TV channels available.

The TV systems are automatically selected as in the following sequence and channels in those TV systems are searched for automatically:

- 1 - TV system FRANCE (SECAM L L')
- 2 - TV system EUROPE (PAL/SECAM BG)
- 3 - TV system UK (PAL I)

At the end of the Auto Programming cycle the TV switches to program 1.



- Press simultaneously the two   buttons longer than 4 seconds to start the Auto Programming.

*The Auto programming is stopped by pressing simultaneously the two   buttons.*

## Operation

### On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the timer status, and a moving bar if the volume is adjusted.


- Press  to display information on the screen.
- Press  again to switch off information.

### Selecting TV channels


- Press **P** — or + or press one or two digit buttons on the remote control.  
To select a program number from 0 to 9 press one digit button. To select a program number from 10 to 59 you must press two digit buttons in less than 4 seconds.

or

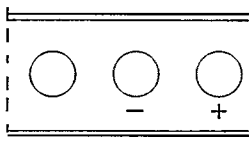

 
- Press — or + on the TV.




### Volume control


- Press  — or + on the remote control.

### Interrupting the sound

- Press  to switch off the sound.
- Press  again or  + to switch on the sound.

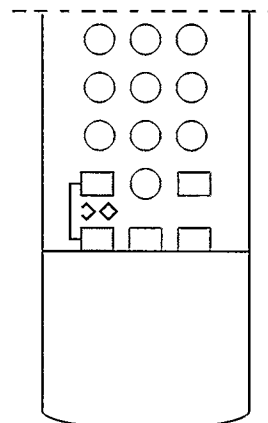

ENGLISH

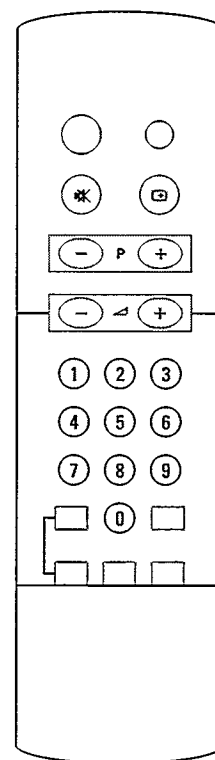

# Menu on screen

With the menu on the screen you can change and store the picture and sound settings. Also you can set the timer.

When you switch on your TV, the picture and sound settings have certain values. These values are initially stored by the factory. Using the menu on screen you can change these values. Also if you store these values (by pressing simultaneously the two  $\diamond\diamond$  buttons after a change), the TV will switch on with your stored picture and sound values.

The stored picture and sound values can also be recalled by pressing **PP**.

- Press **MENU**.
- ▷ **VOLUME** appears, adjust the volume by pressing — or +.  
If you want to store this setting press simultaneously the two  $\diamond\diamond$  buttons.
- Press **MENU** again.
- ▷ **BRIGHTNESS** appears, adjust the brightness by pressing — or +.  
If you want to store this setting press simultaneously the two  $\diamond\diamond$  buttons.
- Press **MENU** again.
- ▷ **CONTRAST** appears, adjust the contrast by pressing — or +.  
If you want to store this setting press simultaneously the two  $\diamond\diamond$  buttons.
- Press **MENU** again.
- ▷ **COLOUR** appears, adjust the colour by pressing — or +.  
If you want to store this setting press simultaneously the two  $\diamond\diamond$  buttons.
- Press **MENU** again.
- ▷ **TIMER** appears.  
The timer can be used to switch on or off the TV automatically after the time you want. You can set the time after which the TV switches on or off in steps of 10 minutes, to a maximum of 24.00 hours.

Switching off automatically:

- Press — or + to select the time after which the TV should switch off.  
The count down starts immediately. You can see the remaining time by pressing  $\boxplus$  on the remote control.  
During the final minute of the selected time period, the seconds remaining are automatically shown on the screen.  
At the end of this time period the TV switches to stand-by mode.

Switching on automatically:

- Press — or + to select the time after which the TV should switch on.  
The count down starts immediately.
- Press  $\text{⏻}$  to switch the TV temporarily off.
- ▷ The TV will switch on after the time you have selected.



Note: If you switch on your TV again before the selected time has elapsed, the timer will be switched off automatically.

If you do not press any button within 3 hours after the TV has switched on automatically, the TV will switch automatically to Stand-by again.

*If you want to stop the **TIMER** press — or + until the selected period on the screen is 00.00.*

- Press **MENU**.
- ▷ The menu disappears.

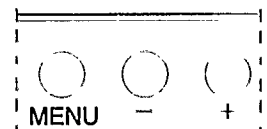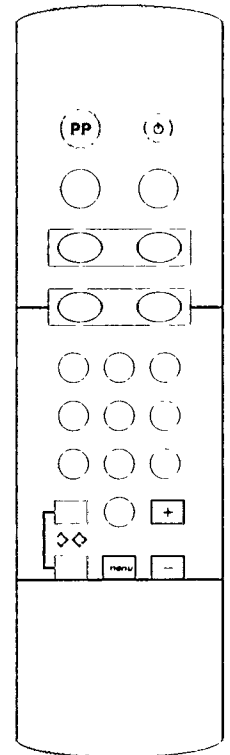


*If you want to leave the menu, for example after changing the contrast setting, you can either wait approximately 15 seconds or continue to press the **MENU** button until the menu disappears from the screen.*




# Peripheral connections

## Aerial connection

You can connect your videorecorder or other equipment via the aerial connection on the back of the TV.

 

- Unplug the aerial plug from your TV and insert it into the aerial input  of your equipment.
- Connect another aerial plug to the output  of your equipment, connect the other side to the aerial input  of your TV.
- Switch on your equipment.
- Check in the handbook of the particular equipment to see what the test signal looks like.
- Now, refer to the section **Storing TV channels** to search for and store this signal on a programme number. After that, you can receive signals from your equipment on this programme number.

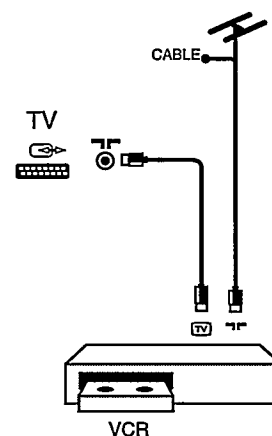


ENGLISH

## Euroconnection (scart) for e.g. videorecorder

You can connect for example a videorecorder or satellite tuner to your TV via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.


- Connect the eurocable to the euroconnector socket of your videorecorder or electronic equipment and to the euroconnector socket of your TV.
- Connect an aerial cable to the output  of your video recorder and to the aerial input  of your TV.
- Normally if the electronic equipment is switched on, the picture will automatically appear on the TV screen; if not select program number 0.

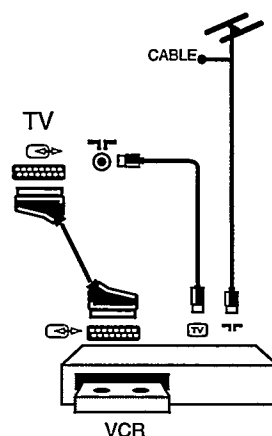

## Euroconnection (scart) for audio amplifier

An external audio amplifier can be used to listen to your TV sound. In this case you need a special euroconnector cable, provided with audio out plugs. Ask your dealer for an appropriate cable.

- Connect the audio plugs into the audio input of your audio amplifier.
- Connect the euroconnector into the euroconnector socket of your TV.

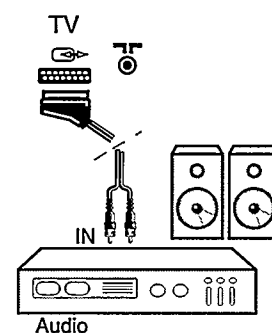


## Audio/Video in connection

You can connect audio-video equipment, like a camcorder, to the AUDIO IN - VIDEO IN on the front of your TV. Ask your dealer for an appropriate cable.

NOTE: Do not use the Audio/Video IN connection and the Euroconnection at the same time.

- Connect your camcorder to the VIDEO IN and AUDIO IN of your TV.
- Press START or PLAY on your equipment.
- Select program number 0.
- ▶ The picture from your camcorder appears on the screen.

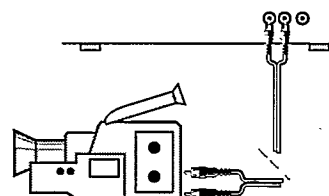

## Headphones

- Connect the headphones plug to the headphones socket on front of the TV.
- ▶ The internal loudspeakers of your TV are automatically switched off.

# Tips

## To clean the TV

Clean the TV using a slightly damp chamois leather.  
**Never use aggressive cleaning agents.**

## Poor or no picture:

Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition?

Do you use good quality aerial connectors and cables?

If an indoor aerial is used, refer to the section "Installation" to improve the reception.

## TV switches automatically on or off.

Probably you have accidentally used the timer (see page 4).

## Remote control is not working properly:

Probably the batteries are flat, replace the batteries.

Are you directing the remote control towards the TV?

## No picture from electronic equipment connected via euroconnector or via Audio Video in:

Did you try selecting program 0?

Is the electronic equipment switched on and is START or PLAY pressed?

## No solution:

Switch your TV off and on again with the **ⓘ** button.

**Never attempt to repair a defective TV set yourself.**


Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control.







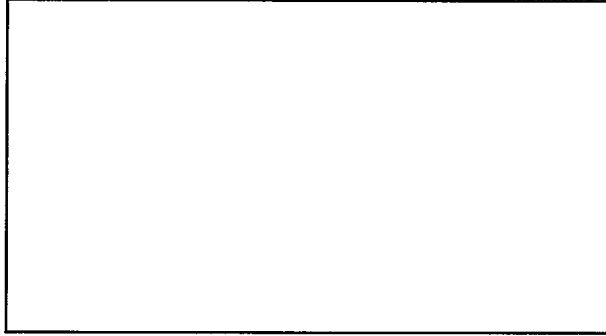

15AA3336  
17AA3346  
21AA3356  
21PT134B